Operating Instructions

COMPACT DISC PLAYER

PD-54
PD-S802
PD-S702

COMPACT disc DIGITAL AUDIO

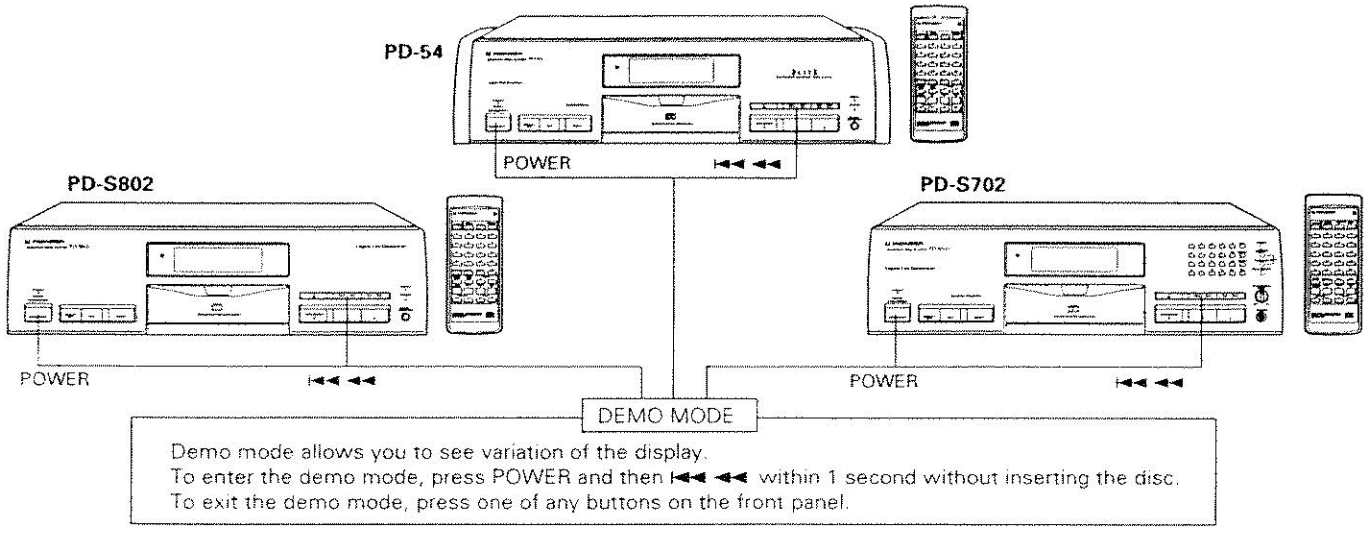
PD-54
POWER
PD-S802
POWER
PD-S702
POWER
DEMO MODE
Demo mode allows you to see variation of the display.
To enter the demo mode, press POWER and then ⏮ ◀◀ within 1 second without inserting the disc.
To exit the demo mode, press one of any buttons on the front panel.

Thank you for buying this Pioneer product.
Please read through these operating instructions so you will know how to operate your model properly. After you have finished reading the instructions, put them away in a safe place for future reference.
In some countries or regions, the shape of the power plug and power outlet may sometimes differ from that shown in the explanatory drawings. However, the method of connecting and operating the unit is the same.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

IMPORTANT NOTICE

[For U.S. and Canadian models]

The serial number for this equipment is located on the rear panel. Please write this serial number on your enclosed warranty card and keep it in a secure area. This is for your security.

[For Canadian model]

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

ATTENTION: POUR PREVENIR LES CHOCS ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.

"This product complies with the Radio Interference requirements of the EC (European Community) Directive 87/308/EEC."

CAUTION: Be sure to use the shielded cables when connecting this equipment to other devices.

Set the VOLTAGE SELECTOR switch(es) before connecting the power cord to an AC outlet.
(See page 3.)

PIONEER®
The Art of Entertainment

IMPORTANT 1

The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION:
TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT 2

The wires in this mains lead are coloured in accordance with the following code :

blue neutral
brown live

If the plug provided is unsuitable for your socket outlets, the plug must be cut off and a suitable plug fitted. The cut-off plug should be disposed of and must not be inserted into any 13 amp socket as this can result in electric shock. The plug or adaptor or the distribution panel should be provided with 13 amp fuse. As the colours of the wires in the mains lead of this appliance may not correspond with coloured markings identifying the terminals in your plug, proceed as follows :

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

Do not connect either wire to the earth terminal of a three pin plug.

NOTE
After replacing or changing a fuse, the fuse cover in the plug must be replaced with a fuse cover which corresponds to the colour of the insert in the base of the plug or the word that is embossed on the base of the plug, and the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from your dealer.

This appliance is rated at 13 amps. Only 13 amp fuses approved to B.S. 1362 A.S.T.A. should be used.

SAFETY INSTRUCTIONS

READ INSTRUCTIONS – All the safety and operating instructions should be read before the appliance is operated.

RETAIN INSTRUCTIONS – The safety and operating instructions should be retained for future reference.

HEED WARNING – All warnings on the appliance and in the operating instructions should be adhered to.

FOLLOW INSTRUCTIONS – All operating and use instructions should be followed.

WATER AND MOISTURE – The appliance should not be used near water – for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.

LOCATION – The appliance should be installed in a stable location.

WALL OR CEILING MOUNTING – The appliance should not be mounted to a wall or ceiling.

VENTILATION – The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.

HEAT – The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.

POWER SOURCES – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

POWER-CORD PROTECTION – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

POLARIZATION – If your purchased product is provided with a polarized power plug, please read the following instructions. This product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

CLEANING – The appliance should be cleaned only with a polishing cloth or a soft dry cloth. Never clean with furniture wax, benzine, insecticides or other volatile liquids since they may corrode the cabinet.

POWER LINES – An outdoor antenna should be located away from power lines.

NONUSE PERIODS – The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

OBJECT AND LIQUID ENTRY – Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

DAMAGE REQUIRING SERVICE – The appliance should be serviced by a Pioneer authorized service center or qualified service personnel when:

- The power-supply cord or the plug has been damaged.
- Objects have fallen, or liquid has been spilled into the appliance.
- The appliance has been exposed to rain.
- The appliance does not appear to operate normally or exhibits a marked change in performance.
- The appliance has been dropped or the enclosure damaged.

SERVICING – The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

OUTDOOR ANTENNA GROUNDING – If an outside antenna is connected to the antenna terminal, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges.
In the U.S.A. section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Fig. A.

CART – An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

NEC – NATIONAL ELECTRIC CODE

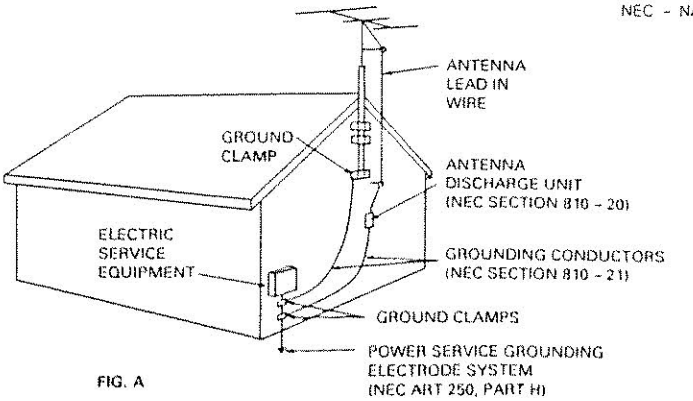

FIG. A

PD-S802

TWO VOLTAGE SELECTOR SWITCHES

(Multi-voltage model and Singapore model only)

Only multi-voltage model and Singapore model are provided with these switches. U.S., Canadian, European, U.K., and Australian models are not provided with these switches.

Mains voltages in Saudi Arabia are 127V and 220V only. Never use this model with a 110V setting in Saudi Arabia.

The line voltage selector switches are located on the rear panel. Before your model is shipped from the factory, these switches are set to the power requirements of the destination. Check that they are set properly before plugging the power cord into the household wall outlet. If the voltage is not properly set or if you move to an area where the voltage requirements differ, adjust the selector switches as follows.

1. Use a medium-sized (flat blade) screwdriver.
2. First, insert the screwdriver in the groove of the voltage selector at the right, and adjust so that the arrow points to the voltage value of your area.
3. Next, insert the screwdriver in the groove of the voltage selector at the left and adjust until the voltage is the same as at the right.

Multi-voltage model

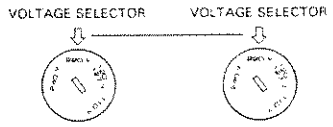

Singapore model



PD-S702

LINE VOLTAGE SELECTOR SWITCH

(Multi-voltage model only)

Only multi-voltage models are provided with this switch. U.S., Canadian, European, U.K., and Australian models are not provided with this switch.

Mains voltages in Saudi Arabia are 127V and 220V only. Never use this model with a 110V setting in Saudi Arabia.

The line voltage selector switch is located on the rear panel of this player. Before your player is shipped from the factory, the switch is set to the power requirements of the player's destination. Check that it is set properly before plugging the power cord into the outlet. If the voltage is not properly set or if you move to an area where the voltage requirements differ, adjust the selector switch as follows:

- Use a medium-sized (flat blade) screwdriver. Insert the tip of the screwdriver into the groove of the selector switch and turn it so that the power voltage marking of your area points to the arrow.

VOLTAGE SELECTOR

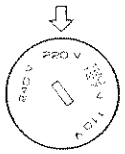

[FOR EUROPEAN AND U.K. MODELS]

CAUTION

This product contains a laser diode of higher class than 1. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product.
Refer all servicing to qualified personnel.

The following caution label appears on your player.

Location: rear of the player

[FOR U.S. MODEL]
CAUTION

- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- The use of optical instruments with this product will increase eye hazard.

Information to User

Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

– Reorient or relocate the receiving antenna.

– Increase the separation between the equipment and receiver.

– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

– Consult the dealer or an experienced radio/TV technician for help.

Dear Customer:

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion-and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For A Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise. This list of sound levels is included for your protection.

Decibel Level	Example
30	Quiet library, soft whispers
40	Living room, refrigerator, bedroom away from traffic
50	Light traffic, normal conversation, quiet office
60	Air conditioner at 20 feet, sewing machine
70	Vacuum cleaner, hair dryer, noisy restaurant
80	Average city traffic, garbage disposals, alarm clock at two feet.

THE FOLLOWING NOISES CAN BE DANGEROUS UNDER CONSTANT EXPOSURE

90	Subway, motorcycle, truck traffic, lawn mower
100	Garbage truck, chain saw, pneumatic drill
120	Rock band concert in front of speakers, thunderclap
140	Gunshot blast, jet plane
180	Rocket launching pad

Information courtesy of the Deafness Research Foundation.

THE POWER SWITCH IS SECONDARY CONNECTED AND THEREFORE DOES NOT SEPARATE THE UNIT FROM MAINS POWER IN STANDBY POSITION

[For Canadian model]

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications

CONTENTS

ABOUT THESE OPERATING INSTRUCTIONS 5
CAUTIONS REGARDING HANDLING 5
CONNECTIONS 6
CONFIRM SUPPLIED ACCESSORIES 7
PUT BATTERIES INTO THE REMOTE CONTROL UNIT 7
REMOTE CONTROL OPERATIONS 7
NAMES AND FUNCTIONS OF PARTS 8
BASIC OPERATION 9
VARIOUS OPERATIONS 11
TO PLAY ONLY DESIRED TRACKS 15
CONVENIENT OPERATION FOR RECORDING 18
TROUBLESHOOTING 22
SPECIFICATIONS 23

ABOUT THESE OPERATING INSTRUCTIONS

The location of the buttons and some functions differ between the PD-54/PD-S802 and the PD-S702. Be sure to read the explanation which corresponds to your unit.

AC power cord connection and functions

Some functions cannot be carried out depending on the connection of AC power cord.

Function	When the AC power cord is connected to the unswitched outlet of an amplifier or wall outlet.	When the AC power cord is connected to the switched outlet of an amplifier or audio timer.
Timer playback	No	Yes
Program memory	Yes	No

CAUTIONS REGARDING HANDLING

Location

Install the player in a well-ventilated location where it will not be exposed to high temperature or humidity.

Do not install the player in a location which is exposed to direct rays of the sun, or near stoves or radiators. Excessive heat can adversely affect the cabinet and internal components. Also, installation of the player in a damp or dusty environment may result in malfunction or accident.

Precautions regarding installation

- Avoid placing the player on heat-generating sources such as amplifiers.
- Install this compact disc player as far as possible from tuners and TV sets. Noise may be particularly noticeable when an indoor antenna is used. In such cases, make use of an outdoor antenna, or turn off power to the compact disc player.
- Please place this unit on a level surface.

Cleaning the player

To clean the PLAYER, wipe with a soft, dry cloth. For stubborn dirt, wet a soft cloth with a mild detergent solution made by diluting one part detergent to 5 or 6 parts water, wring well, then wipe off the dirt. Use a dry cloth to wipe the surface dry. Do not use volatile liquids such as benzene and thinner which are harmful to the unit.

Storing discs

Be careful not to allow discs to warp; always store discs in their cases vertically, avoiding locations with high heat or humidity, or extremely low temperatures.

CD lens cleaner

The player's pickup lens should not become dirty in normal use, but if for some reason it should malfunction due to soiling, consult your nearest PIONEER authorized service center. Lens cleaners for CD players are commercially available, but special care should be exercised in their use since some may cause damage to the lens.

Condensation

When this unit is brought into a warm room from previously cold surroundings or when the room temperature rises sharply, condensation may form inside, and the unit may not be able to attain its full performance. In cases like this, allow the unit to stand for about an hour or raise the room temperature gradually.

Cleaning and handling compact discs

- Always keep your discs clean by wiping them gently with a soft cloth from the inner edge toward the outer periphery.
- If a disc becomes very dirty, dip a soft cloth in water, and after wringing it out well, wipe the dirt away gently, and then remove any water drops with another soft, dry cloth.
- Do not use record cleaning sprays or antistatic agents on discs. Also, never clean discs with benzene, thinner, or other volatile solvents, since damage to the disc surface may result.
- With this player, use discs which display the mark shown below. (Optical audio digital discs.)
- When holding discs, do not touch their signal surfaces (the side reflecting a "rainbow" pattern, opposite the label side). Hold by the edges, or by one edge and the center hole.
- Do not affix gummed labels or tape to the label surfaces. Also, do not scratch or damage the label.
- Discs rotate at high speed inside the player. Do not use damaged (cracked or warped) discs.

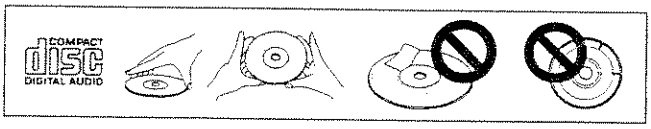

NOTE:

- *When setting an 8 cm (3-inch) CD single, do not use the 8 cm (3-inch) CD single adaptor.*
- *Never attempt to load both 8 cm (3-inch) and 12 cm (5-inch) discs together, since disc damage or other malfunctions may result. Always load only one disc at a time.*

CONNECTIONS

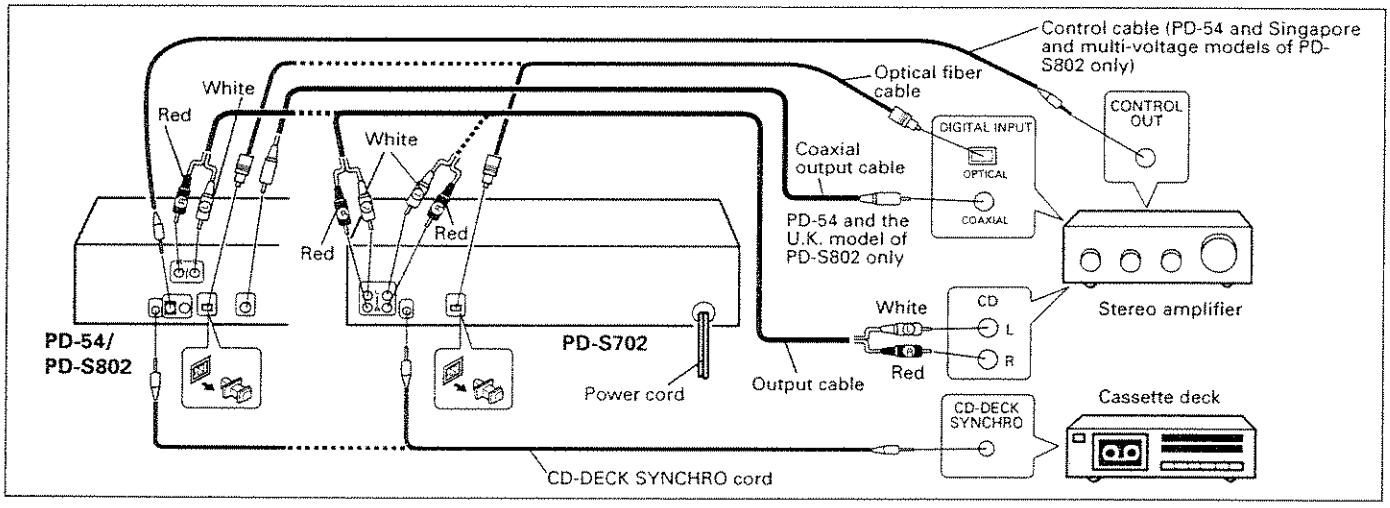

- Make sure that all of the components are turned off before making connections.

CONNECTING THE OUTPUT CABLE:

[PD-54/PD-S802]

Connect the LINE OUT jacks of this unit to the input jacks (CD or AUX) of the amplifier. Make sure that the white plugs are connected to the left (L) jacks and the red plugs to the right (R) jacks.

- Be sure not to connect this unit to the amplifier's PHONO jacks, as sound will be distorted and normal playback will not be possible.

[PD-S702]

The unit is equipped with two sets of output connectors in order to provide VARIABLE and FIXED output levels. Connect the appropriate set of connectors to your amplifier's INPUT connectors. The two sets of connectors can also be used to connect the player simultaneously to two stereo amplifiers.

- When the VARIABLE jacks are used: The sound output level can be adjusted using the PHONES/LINE LEVEL control or the OUTPUT LEVEL buttons on the remote control unit.
- When the FIXED jacks are used: The sound output level remains fixed; the PHONES/LINE LEVEL control and the OUTPUT LEVEL buttons on the remote control unit have no effect.

CONNECTING TO THE DIGITAL JACK

This unit can be connected to an amplifier equipped with an optical digital jack or coaxial digital jack (PD-54 and the U.K. model of PD-S802 only). The optical fiber cable and coaxial output cable are not supplied with this unit. Use a separately sold optical fiber cable or coaxial cable for the digital jack connections.

NOTES:

- *No sound may be produced if optical connections are made with an amplifier having different optical signal standards.*
- *Volume control is not possible when a digital output jack is used.*

When using the OPTICAL DIGITAL OUT jack:

1. Remove the protective dust cap from this unit's OPTICAL DIGITAL OUT jack.
2. Use an optical fiber cable to connect the OPTICAL DIGITAL OUT jack of this unit to the optical digital input jack of the amplifier.

- Align the plug of the optical fiber cable with the optical digital jack and fully insert the plug to make a secure connection.

Precautions concerning use of optical fiber cables

- Fully insert the optical fiber cable plugs all the way into the jacks.
- Be careful not to fold or crimp the cable. When coiling an optical fiber cable for storage, make sure the diameter of the coil is 15 cm (6 in) or larger.
- Use an optical fiber cable with a length of 3 m (9 ft) or less.
- Protect the optical fiber cable plugs from scratches and dust.
- When the unit is not connected using an optical fiber cable, be sure to keep the protective dust cap plugged into the optical digital output jack at all times.

When using the COAXIAL DIGITAL OUT jack:
(Available with the PD-54 and the U.K. model of PD-S802 only: Not available with the PD-S702)

Use a coaxial output cable to connect the COAXIAL DIGITAL OUT jack of this unit to the coaxial digital input jack of the amplifier.

CD-Deck synchro function

If you have a Pioneer cassette deck provided with the CD-Deck synchro function, connect the CD•DECK SYNCHRO jacks of the CD player and cassette deck. With this function, synchro recording can be carried out between player and deck.

- For details on connections and operation, refer to the Operating Instructions supplied with the cassette deck.
- The CD-DECK SYNCHRO cord is not supplied with the CD player.

NOTE:

In order to enable the CD-DECK SYNCHRO recording function, the normal output cable must be connected to the stereo amplifier.

System remote control with a Pioneer stereo amplifier that has the mark

Available with the PD-54 and Singapore and multi-voltage models of PD-S802 only: Not available with the PD-S702.

When a Pioneer stereo amplifier bearing the mark is used, connect the CONTROL IN jack on the rear panel of the CD player to the CONTROL OUT jack of the amplifier. This will enable the CD player to be controlled using the remote control unit supplied with the stereo amplifier. If you do not plan to use this feature, it is not necessary to connect CONTROL IN/OUT jacks.

- The control cable is supplied with the CD player.
- The remote control unit supplied with the amplifier can be used to control Play, Stop, Pause and Track Search.
- For instructions regarding connections and operation, refer to the Operating Instructions provided with your stereo amplifier.

NOTES:

- *When a control cable is connected to the player's CONTROL IN jack, direct control of the player with the remote control unit is not possible. Operate the player with the remote control unit by aiming it at the amplifier.*
- *Be sure to connect both of the control cable's plugs securely to the CONTROL IN and CONTROL OUT terminals. Do not connect only one end of the cable.*
- *Be sure to turn off the power of the amplifier before connecting the power cord and output cable.*
- *When only the digital output is connected, the remote sensor of the amplifier does not function. To operate it, connect the output cable to the stereo amplifier as well as connecting the digital output.*

CONNECTING THE POWER CORD

Connect the power cord to a household AC wall outlet or an AC outlet on your amplifier. (See the section "AC power cord connection and functions" on page 5.)

- Make sure plugs are inserted fully into the jacks and wall outlet.

CONFIRM SUPPLIED ACCESSORIES

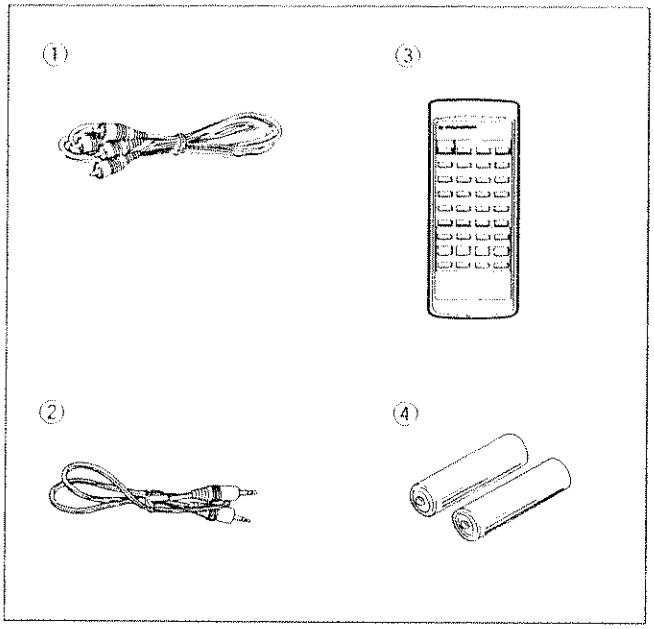

① Output cable x 1
② Control cable x 1 (PD-54 and Singapore and multi-voltage models of PD-S802 only: Not available with the PD-S702)
③ Remote control unit x 1
④ AAA/R03 dry cell batteries x 2

POWER-CORD CAUTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement.

PUT BATTERIES INTO THE REMOTE CONTROL UNIT

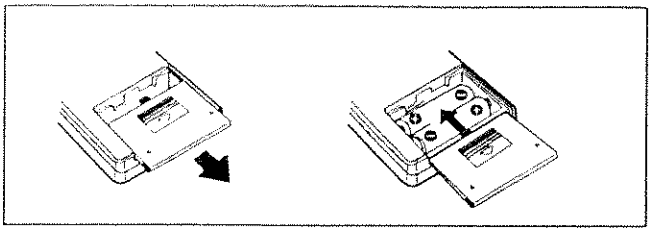

Open the lid of the battery compartment on the rear of the remote control unit, and insert the batteries, taking care to align the ⊕ and ⊖ polarities correctly.

NOTES:

- *In order to prevent battery leakage, remove the batteries when not using the remote control unit for an extended period (one month or more). If leakage occurs, carefully wipe away any battery fluid inside the compartment before inserting new batteries.*
- *Do not allow books or other objects to rest on top of the remote control unit, since the buttons may be depressed, causing faster exhaustion of the batteries.*

Incorrect use of batteries may cause leakage or rupture. Always be sure to follow these guidelines:

A. Always insert batteries into the battery compartment correctly matching the positive ⊕ and negative ⊖ polarities, as shown by the display inside the compartment.
B. Never mix new and used batteries.
C. Batteries of the same size may have different voltages, depending on brand. Do not mix different brands of batteries.

REMOTE CONTROL OPERATIONS

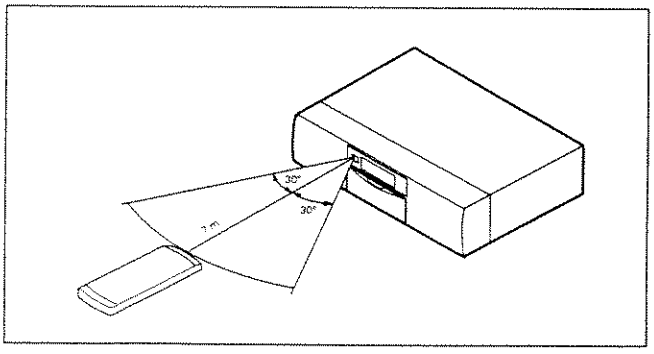

When operating the remote control unit, point the unit's infrared signal transmitter at the remote control receiver (REMOTE SENSOR) on the front panel of the player. The remote control unit can be used within a range of about 7 meters (23 feet) from the remote sensor, and within angles of up to about 30 degrees.

NOTE:

If the remote control sensor window is in a position where it receives strong light such as sunlight or fluorescent light, control may not be possible.

NAMES AND FUNCTIONS OF PARTS

PD-54/PD-S802

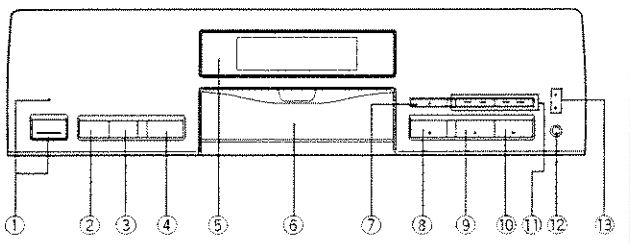

PD-S702

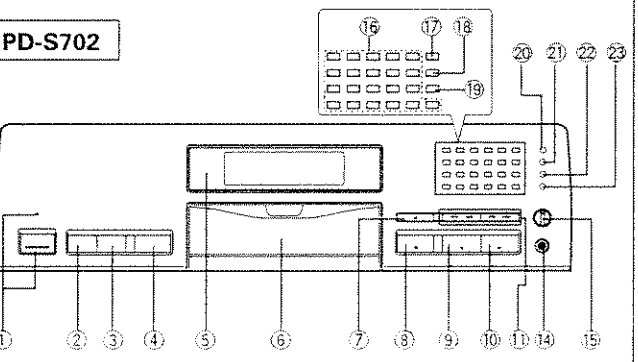

FRONT PANEL

① POWER STANDBY/ON switch and STANDBY indicator
② DISPLAY OFF button
③ TIME button
④ REPEAT button
⑤ Remote sensor
Receives the signal from the remote control unit.
⑥ Disc tray
⑦ Stop button (■)
⑧ OPEN/CLOSE button (▲)
⑨ Pause button (II)
⑩ Play button (►)
⑪ Track/Manual search buttons (|◄◄ ◄◄/►► ►►|)
⑫ OUTPUT SELECTOR button (PD-54/PD-S802 only)
⑬ DIGITAL/ANALOG output indicators (PD-54/PD-S802 only)
⑭ Headphones jack (PHONES) (PD-S702 only)
⑮ Headphones line/volume control (PHONES/LINE LEVEL) (PD-S702 only)
⑯ Track number/Digit buttons (1 - 20, >20) (PD-S702 only)
⑰ PGM button (PD-S702 only)
⑱ CHECK button (PD-S702 only)
⑲ CLEAR button (PD-S702 only)
⑳ DELETE button (PD-S702 only)
㉑ •COMPU/••AUTO EDIT button (PD-S702 only)
㉒ TIME FADE EDIT button (PD-S702 only)
㉓ PEAK SEARCH button (PD-S702 only)

PD-54/PD-S802

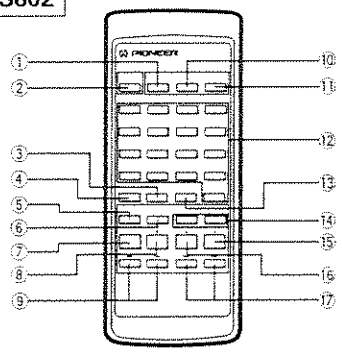

PD-S702

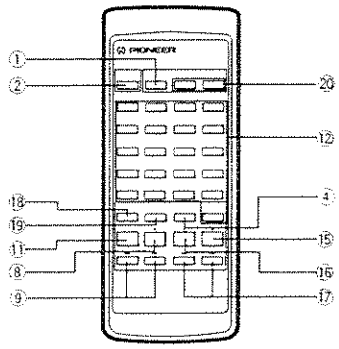

REMOTE CONTROL UNIT

Remote control buttons with the same names or marks as buttons on the front panel of the player control the same operations as the corresponding front panel buttons.

① OPEN/CLOSE button
② POWER button
③ CHECK button (PD-54/PD-S802 only)
④ Program button (PROGRAM/PGM)
⑤ COMPU/AUTO EDIT button (PD-54/PD-S802 only)
⑥ TIME FADE EDIT button (PD-54/PD-S802 only)
⑦ PEAK SEARCH button (PD-54/PD-S802 only)
⑧ STOP button (■)
⑨ MANUAL search buttons (◄◄ / ►►)
⑩ REPEAT button (PD-54/PD-S802 only)
⑪ RANDOM PLAY button
⑫ Track number/Digit buttons
PD-54/PD-S802: (1 - 16, >16)
PD-S702: (1 - 20, >20)
⑬ CLEAR button (PD-54/PD-S802 only)
⑭ INDEX buttons (—/—) (PD-54/PD-S802 only)
⑮ PLAY button (►)
⑯ PAUSE button (II)
⑰ TRACK search buttons (|◄◄ / ►►|)
⑱ HI-LITE SCAN button (PD-S702 only)
⑲ RESERVE button (PD-S702 only)
⑳ OUTPUT LEVEL buttons (–/+) (PD-S702 only)

BASIC OPERATION

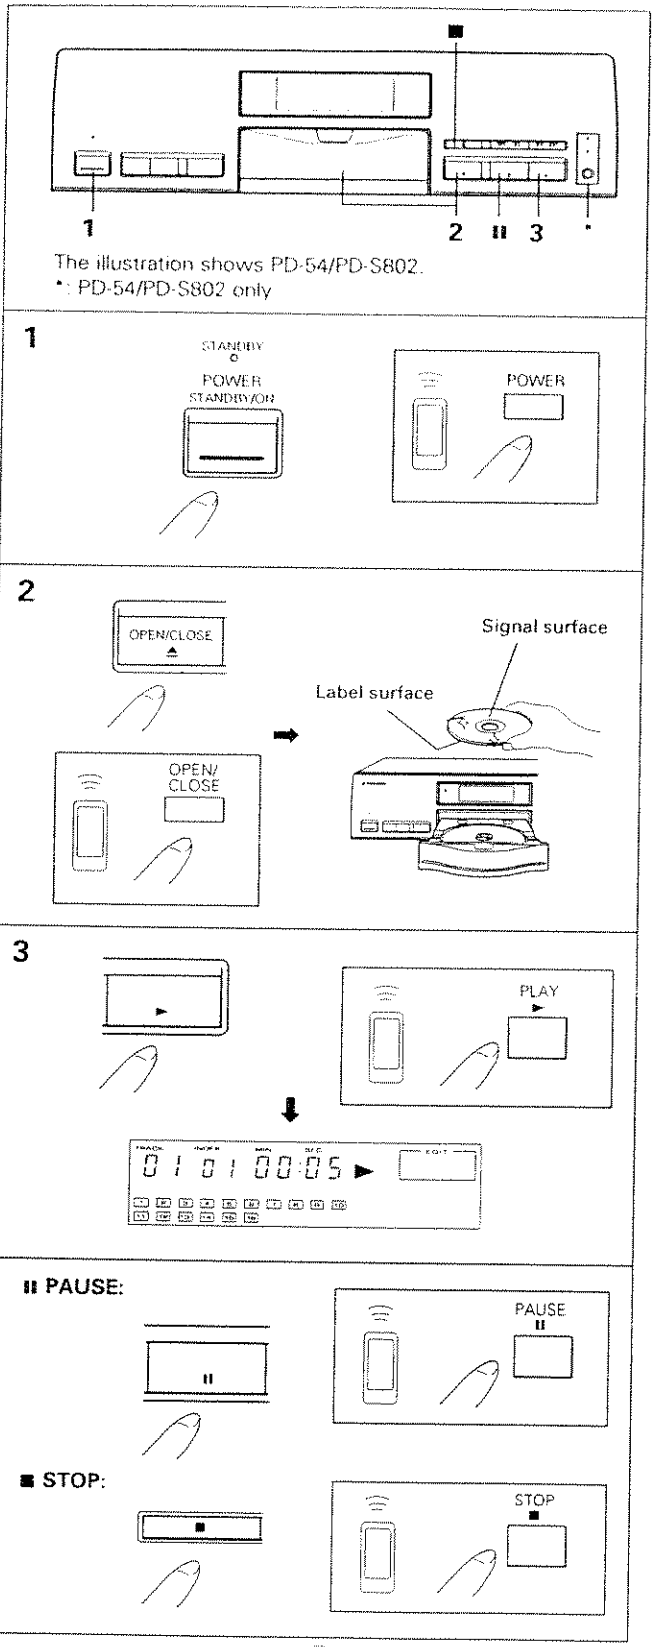

Operations indicated by the [ ] mark are performed with the remote control unit.

To play a compact disc

1 Press POWER to turn on the power to the player.
2 Press OPEN/CLOSE and load a disc.
Place the disc with the label surface facing DOWN.
3 Press ► to start playback.

To pause playback temporarily:

Press II. The II indicator lights and playback is paused at that point. Pressing II again or ► resumes playback from the position where pause mode was entered.

To stop playback:

Press ■.

To stop playback and take out the disc:

Press OPEN/CLOSE and remove the disc. Press OPEN/CLOSE again to close the disc tray and then press POWER to turn off the power.

Timer playback

By using a commercially available audio timer, it is possible to initiate playback at any time automatically.

1. Turn on the power to the player, load a disc into the disc tray and close the disc tray with OPEN/CLOSE.
2. Set the time at which you wish playback to begin. The timer will supply power to both the amplifier and the player at the preset time, turning all the components on and initiating the playback mode. Playback starts from the first track.

NOTES:

- *If no disc has been loaded in the player, the player will enter the standby mode when the audio timer turns the player's power on.*
- *Pressing any function buttons before commencement of timer start cancels the timer start function.*

To turn off the display

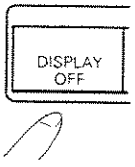

Pressing the DISPLAY OFF button selects the Display Off mode. In this mode, all displays are turned off during playback. This function eliminates the use of unnecessary circuits, thus preventing any adverse effect on playback sound quality.

- The indicators in the display window will light while the player is in stop mode even when the Display Off function is activated. When ► is pressed to begin playback, all indicators on the display will disappear.
- During playback, the indicators will light for several seconds if any of the player's controls are operated.
- To cancel the Display Off mode, press the DISPLAY OFF button once again.

To select the DIGITAL OUT jacks or analog LINE OUT jacks (PD-54/PD-S802 only)

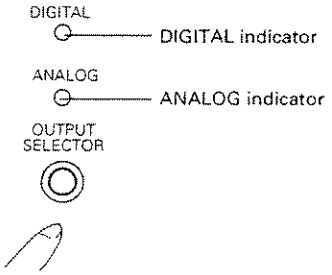

Each time the OUTPUT SELECTOR button is pressed, the signal output jacks are switched in the following order.

DIGITAL OUT jacks	Analog LINE OUT jacks
ON (Both of the DIGITAL and ANALOG indicators light.)	ON
OFF	ON (The ANALOG indicator lights.)
ON (The DIGITAL indicator lights.)	OFF

Time display

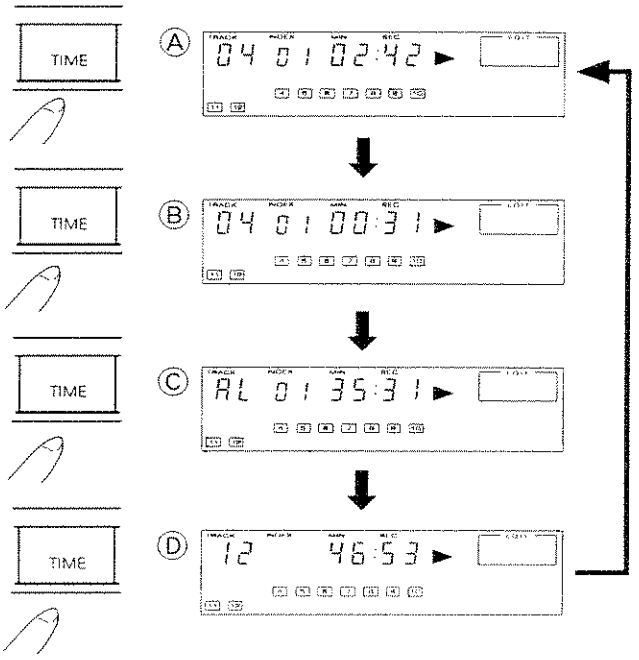

During playback, pressing the TIME button changes the time display in the following sequence: Ⓐ Time (elapsed playback time of the track being played) → Ⓑ Remain (remaining playback time of the track being played) → Ⓒ AL Remain (remaining playback time from the playing point to the end of the disc) → Ⓓ Total (total playback time of the disc).

- With track No. 30 or more, the Remain time Ⓑ cannot be displayed.
- During random playback, AL Remain time Ⓒ cannot be displayed.
- During Program playback, the remaining playback time of the programmed tracks can be displayed with the AL Remain setting Ⓒ. The number of program steps and total time of program can be displayed with the Total setting Ⓓ.

To display the playing time of each track

During stop mode

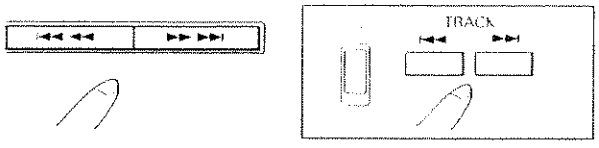

During stop mode, pressing ►► ►►I (or ►►I) displays the playing time of each track starting from track No.1.

- This function cannot be carried out with track No.30 or above.

VARIOUS OPERATIONS

Direct play - To play a particular track by specifying the track number

PD-54/PD-S802

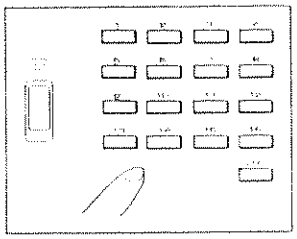

PD-S702

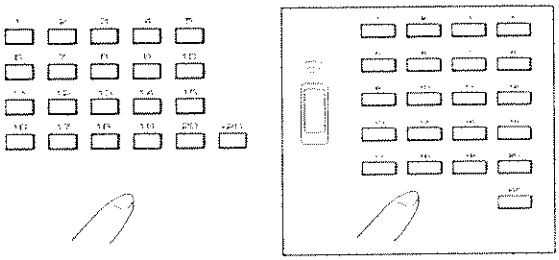

When the track No. is specified with the digit buttons, playback starts automatically from the beginning of the specified track.

For PD-54/PD-S802:
To specify track No. from 1 to 16, simply press the corresponding digit buttons (1 – 16). To specify track No. 17 or above, use >16 .

Example : To enter track No. 26: >16 , 2 , 6
To enter track No. 30: >16 , 3 , 10

- When entering 17 or above, 10 functions as 0.
- When >16 is pressed, the digit button to be next entered should be pressed within 5 seconds.

For PD-S702:
To specify track No. from 1 to 20, simply press the corresponding digit buttons (1 – 20). To specify track No. 21 or above, use >20 .

Example : To enter track No. 26: >20 , 2 , 6
To enter track No. 30: >20 , 3 , 10

- When entering 21 or above, 10 functions as 0.
- When >20 is pressed, the digit button to be next entered should be pressed within 5 seconds.

Track search - To search for a particular track

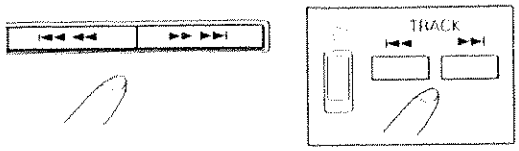

When ►► ►►I (or ►►I) is pressed once or a number of times, playback is advanced to the beginning of a track located after the track being played. The position of the located track corresponds to the number of times the button is pressed.
When I◄◄ ◄◄ (or I◄◄) is pressed once, playback returns to the beginning of the track being played. When this button is pressed more than once, playback is returned to a track located before the track being played. The position of the located track corresponds to the number of times the button is pressed.

- When ►► ►►I (or ►►I) or I◄◄ ◄◄ (or I◄◄) is operated in pause mode or stop mode, press ► to start playback.

NOTE:
During program playback, the I◄◄ ◄◄ (or I◄◄) or ►► ►►I (or ►►I) button can be used to select the programmed track.

Manual search - To search for a particular passage

During playback or pause mode

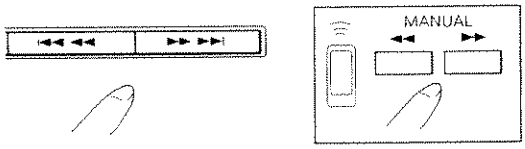

While ►► ►►I (or ►►) is kept pressed, playback rapidly advances toward the end of the disc. When playback reaches the end of the disc, the player enters pause mode and "END" is displayed. While I◄◄ ◄◄ (or ◄◄) is kept pressed, playback rapidly reverses toward the beginning of the disc.
When the desired passage is reached, release ►► ►►I (or ►►) or I◄◄ ◄◄ (or ◄◄). The player enters original mode (playback or pause) where ►► ►►I (or ►►) or I◄◄ ◄◄ (or ◄◄) is released.

NOTE:
During program playback, Manual Search can be carried out in one program step only.

Index search - To search for a desired index number (PD-54/PD-S802 only)

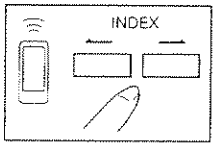

When ⟶| is pressed once, playback advances to the beginning of the next index. When this button is kept pressed, playback advances to successive indexes on the track.
When |⟵ is pressed once, playback returns to the beginning of the index being played. When this button is kept pressed, playback returns to earlier indexes on the track.

- Index numbers are used to indicate the boundaries of the sections on a track. Discs containing a record of index numbers usually carry (IN:DEX) mark on the instruction booklet.

Time location - To start playback from the desired elapsed time

During stop mode

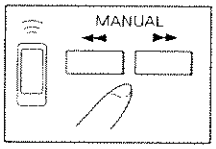

Each time ►► is pressed in stop mode, the elapsed time increases in steps of 1 second. Each time ◄◄ is pressed, the elapsed time decreases in steps of 1 second. When ►► or ◄◄ is kept pressed, the elapsed time changes in steps of 10 seconds. To start playback, press ►.

- A desired track number can be specified with |◄◄ or ►►| (or |◄◄ ◄◄/►► ►►|). After specifying the track number, operate ►► or ◄◄.

NOTES:

- *The |◄◄ ◄◄ and ►► ►►| buttons on the front panel cannot be used to perform time location.*
- *The elapsed time can be specified within the playing time of the displayed track number. If the specified time does not exist on the track, the player will start playback from the beginning of the track.*

Hi-Lite scan (PD-S702 only)

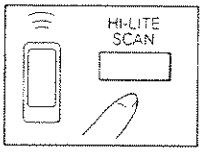

When HI-LITE SCAN is pressed during stop mode, playback starts from a point 1 minute after the beginning of the track, and each track is played for about 10 seconds. The SCAN indicator blinks during Hi-Lite scan mode.

- Hi-Lite scan can be carried out from the desired elapsed time of the track. During playback, press HI-LITE SCAN at the point you want to start Hi-Lite scan playback. The player memorizes the minute and second of the point and Hi-Lite scan playback is carried out from the memorized minute and second on each track.
- The desired tracks can be reserved during Hi-Lite scan playback. Press RESERVE and then enter the desired track numbers with the digit buttons. The player automatically starts playback of the selected tracks after Hi-Lite Scan playback is completed.

NOTES:

- *When the playback time of a track is less than one minute or is shorter than the memorized time, Hi-Lite Scan playback is carried out from the beginning of the track for about 10 seconds. When playback time of a track is less than 10 seconds, the track is played from the beginning to the end.*
- *During program playback or random playback, pressing HI-LITE SCAN cancels program playback or random playback. The player memorizes the time of the point at which HI-LITE SCAN was pressed and Hi-Lite Scan playback is carried out from the memorized time on each track. However, the program contents will not be erased.*
- *One track repeat cannot be performed in Hi-Lite scan playback mode.*

Random playback - To play all tracks in random order

PD-54/PD-S802 **PD-S702**

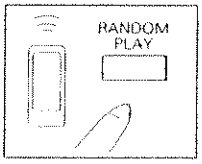

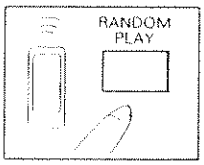

Press RANDOM PLAY on the remote control unit. The RND indicator lights and all tracks on the disc are played in random order. After all tracks are played, the player enters stop mode.
To play programmed tracks (program playback or delete playback (PD-S702 only)) in random order, press RANDOM PLAY or RANDOM after carrying out the program procedure. See "Program playback" or "Delete program playback (PD-S702 only)"

To repeat playback (repeat play)

PD-54/PD-S802

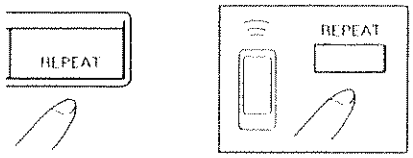

To repeatedly play the displayed track, press REPEAT once. The 1►REPEAT indicator lights. The REPEAT button can be pressed in any playback mode.
To repeatedly play all tracks on the disc in normal playback mode or in the specified playback mode (program playback, delete program playback (PD-S702 only) or random playback), press REPEAT twice. The REPEAT indicator lights.

- To exit repeat mode, press REPEAT so that the 1►REPEAT or REPEAT indicator goes off.

Adjusting the sound volume (PD-S702 only)

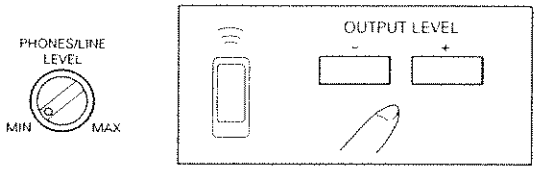

Turn the PHONES/LINE LEVEL control in the MAX direction to increase the headphones sound volume and in the MIN direction to decrease it. The OUTPUT LEVEL buttons on the remote control unit can also be used to adjust the headphones sound volume.

When the LINE OUT VARIABLE jacks on the rear panel are used to connect the player to your stereo amplifier, the motor-driven PHONES/LINE LEVEL control can be adjusted with the OUTPUT LEVEL buttons at your listening position, even when the volume control of the stereo amplifier is left unchanged.

- The output level at the VARIABLE OUTPUT jacks and PHONES jack will be adjusted simultaneously.

To search for the peak volume level within a disc (peak search)

PD-54/PD-S802

PD-S702

With this function, the peak level of a CD can easily be searched for. This is convenient for adjusting the proper recording level.

To search for the peak level of the entire disc:
During stop mode, press PEAK SEARCH.

- The player scans the entire disc and searches for the peak level. It takes about 1 minute with a 60-minute CD. While searching, the PEAK SEARCH indicator blinks on the display.
- To cancel the peak search function, press ■.

To search for the peak level of the programmed tracks:
Program the desired tracks beforehand (page 15) and press PEAK SEARCH. The player scans all of the programmed tracks and searches for the peak level between them.
For PD-S702, the peak search function can be carried out in tracks other than the deleted tracks. Perform the delete program operation (page 17) beforehand.

To adjust the recording level

1. When the player detects the peak level, a 6-second (approximate) portion of the disc including the peak level is played repeatedly.
2. Adjust the recording level on the cassette deck.
3. Set the cassette deck to recording mode and start CD play by pressing ►.

NOTES:

- *The player sometimes detects a different peak level even when the peak search function is carried out on one disc.*
- *With some discs, the player cannot detect the proper peak level. This is not a malfunction.*
- *When the peak level exists at the beginning or end of the track, the section which contains the peak level is played repeatedly for about 3 seconds.*

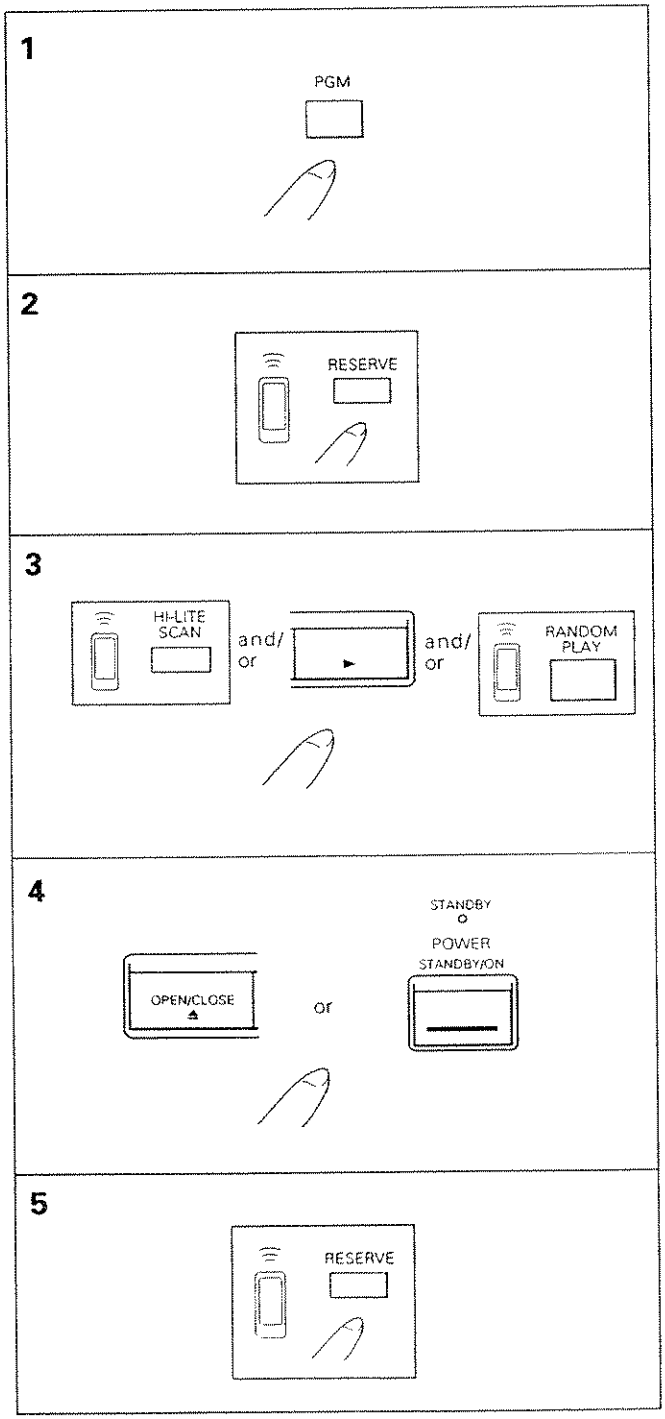

- The buttons (PGM, PLAY ►, OPEN/CLOSE, POWER) on the remote control unit can also be used.

Storing operation pattern (reserve function) (PD-S702 only)

With this function, the player automatically starts playback in selected playback mode and finishes playback by opening the disc tray or turning off the power. For example, if you always perform random playback followed by a disc change, you can store these two operating functions (RANDOM and OPEN/CLOSE), thus allowing you to perform both with a single control.

1 **In stop mode, press PGM.**
2 **Press RESERVE.**
3 **Select the desired playback mode between Hi-Lite Scan playback, normal playback and random playback by pressing HI-LITE SCAN, ► or RANDOM PLAY.**
You can also select these 3 playback modes simultaneously. When HI-LITE SCAN is pressed, ► SCAN indicator lights. When ► is pressed, the ► ALL indicator lights. When RANDOM PLAY is pressed, the ► RND indicator lights.
4 **Select the opening function of the disc tray or the power off function by pressing OPEN/CLOSE or POWER.**
When OPEN/CLOSE is pressed, the ► OPEN indicator lights. When POWER is pressed, the ► OFF indicator lights.
5 **Press RESERVE.**
The selected functions are stored in memory and whenever the RESERVE button is pressed, the stored operating sequence starts automatically.

- During reserve playback, you can enter desired track numbers with the digit buttons. The ► SINGLE indicator lights and the selected tracks will be played after reserve playback ends. However, these track numbers cannot be stored in reserve memory.

NOTES:

- *In reserve memory, you cannot store functions of the OPEN/CLOSE button and POWER button simultaneously. Also, no function can be stored after one of these functions is selected.*
- *The contents stored in reserve memory will not be erased even when the power is turned off. However, if the power cord is unplugged or an audio timer is used to turn off the power, the reserve memory will be erased.*

To clear the contents in reserve memory:

Enter the reserve mode by pressing PGM and then RESERVE in stop mode, and press CLEAR. All of the contents stored in reserve memory are cleared.

TO PLAY ONLY DESIRED TRACKS

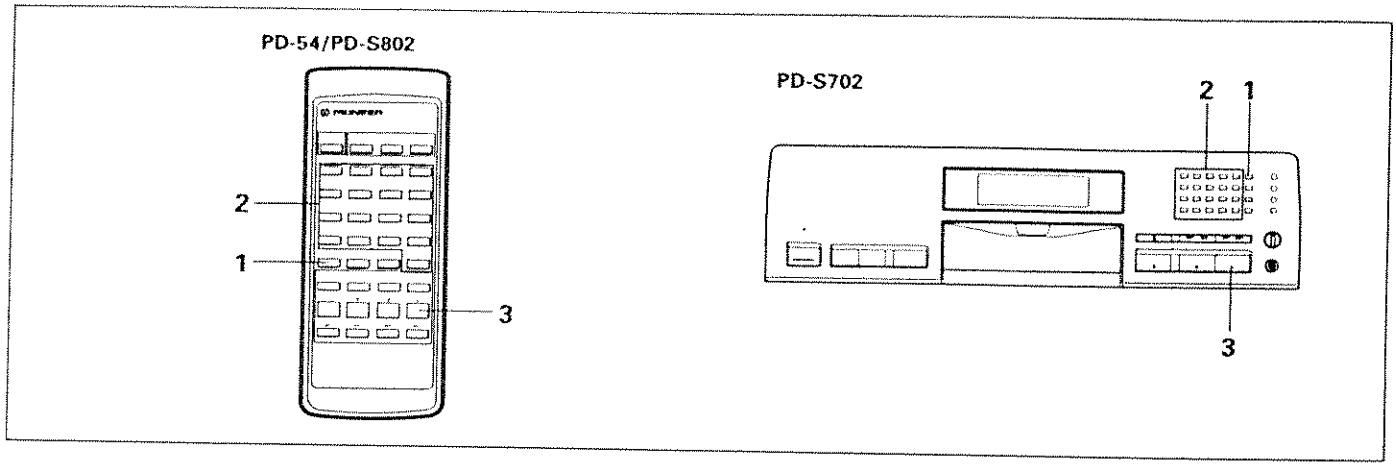

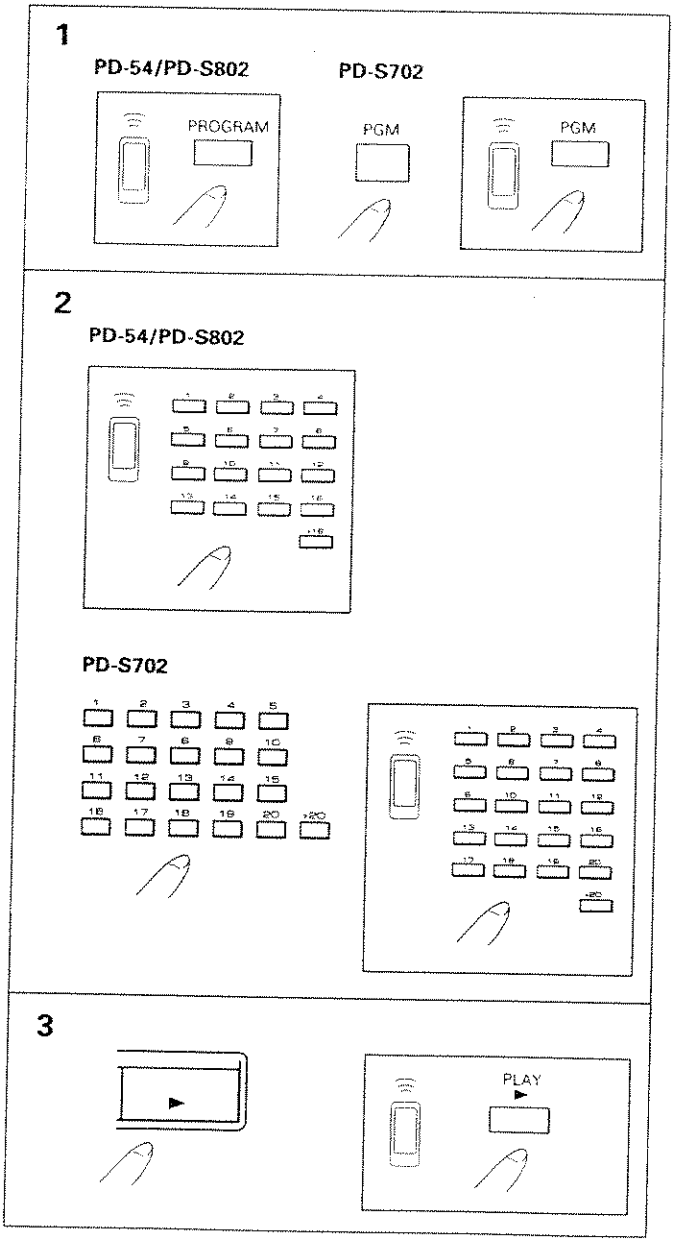

Program playback - To program tracks in desired order

Programming is possible during stop or playback mode.

1 **Press PROGRAM (PD-54/PD-S802) or PGM (PD-S702).**
- The PGM indicator lights on the display.

2 **Enter the desired track numbers in a desired order with the digit buttons.**
- Up to 24 tracks (steps) can be programmed.

3 **Press ►.**
The tracks are played in the programmed order. When all programmed tracks have been played, the player enters stop mode.

To stop Program playback, press ■.

- To go to the previous or next step in a program, press |◄◄ ◄◄ (or |◄◄) or ►► ►►| (or ►►|).
- Each time a track is programmed, the display will show the programmed number.
- If the disc is in the player, the program contents will not be erased even if the power is turned off. However, if the power cord is unplugged or an audio timer is used to turn off the power, the program contents will be erased.

Programming while listening to playback

During normal playback or Hi-Lite scan playback (Direct program) or program playback, you can program the desired tracks. (Hi-Lite Scan playback can be carried out with the PD-S702 only.)

During Hi-Lite scan playback (Direct program: PD-S702 only):
The track being played can be programmed.
1. During playback, press PGM to enter the program mode.
2. Whenever a track to be programmed is played, press PGM. You can enter desired tracks until up to 24 steps are programmed.
3. After programming, press ►. The current playback is cleared and the tracks are played in the programmed order.

During normal playback or program playback:
Press PROGRAM (PD-54/PD-S802) or PGM (PD-S702) to enter the program mode, and enter the desired track numbers with the digit buttons. The program contents are added to the program being played.

Notes on time display
- *If the total playing time or total remaining time exceeds 100 minutes, the corresponding time will not be displayed.*
- *If track No. 30 or above is programmed, total remaining time or total playing time will not be displayed.*

TO PLAY ONLY DESIRED TRACKS

Programming a pause

Inserting a pause in your program can be very useful when carrying out recording. Press ▮▮ instead of entering a track number. "PA" appears on the display.

- For example, when recording on both sides of a cassette tape, if you program a pause after the last track to be recorded on the first side, program playback will pause at that point to allow you to switch tape sides. To resume program playback after the player enters pause mode, press ▮▮.

NOTES:

- *A pause can be programmed only when the program procedure is performed under stop mode.*
- *A pause cannot be programmed at the beginning of a program, nor can two pauses be programmed one after the other.*
- *A pause inserted in a program is counted as one step.*
- *If a pause is programmed as the last step of a program, the player will not enter the pause mode.*

To check the program contents

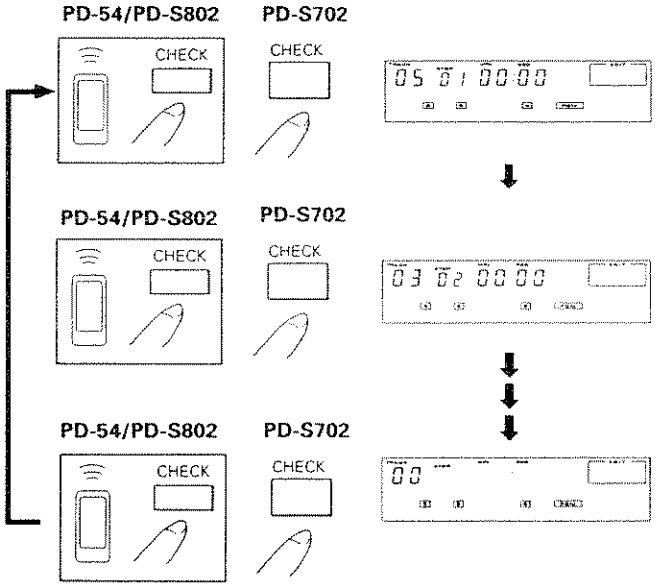

1. **With the player in the program stop mode, press CHECK.**
   - Each time the button is pressed, the programmed tracks will be displayed in the order they were programmed.
2. **After confirming the last program step, the track number display will show "00".**
3. **When CHECK is pressed again, the display will return to that shown in step 1.**

To erase a program

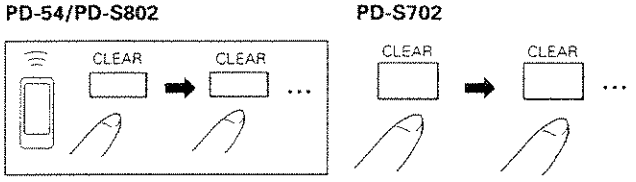

During program mode, press CLEAR.
The last program step is erased and the contents of the previous program step are displayed.

NOTE:

Contents of a program can be erased during playback as well. However, tracks preceding the currently playing track cannot be erased in this way.

To modify the program contents

1

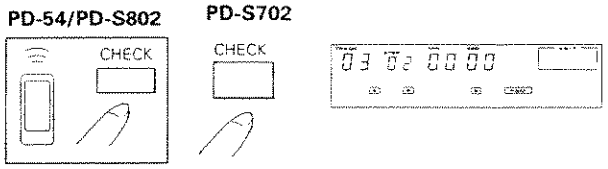

2

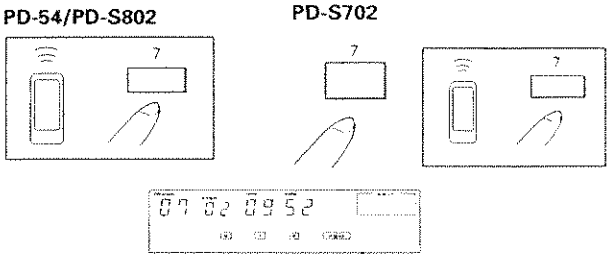

1. Press CHECK so that the program step to be corrected appears on the display.
2. Enter the new track No. with the digit buttons. For example, the programmed track No. 3 in step 2 is changed to track No. 7, using the [7] button.

- Repeat steps 1 and 2 to change other tracks as desired.

To clear all of the program contents

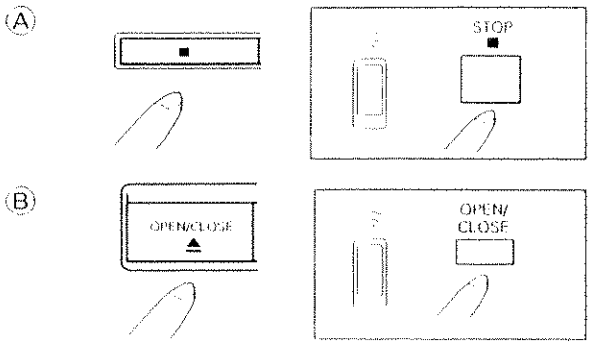

Ⓐ During stop mode, press ■.

Ⓑ When the disc tray is ejected, the program contents will be cleared.

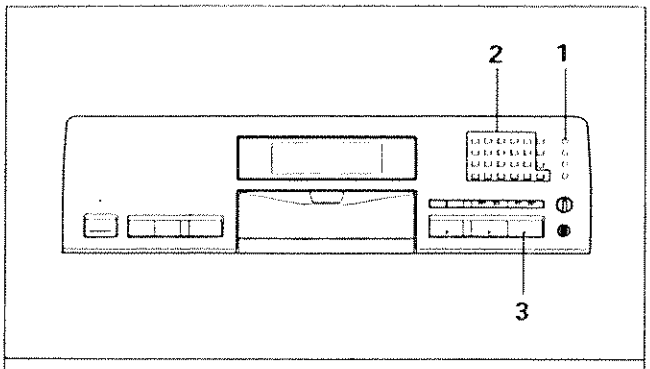

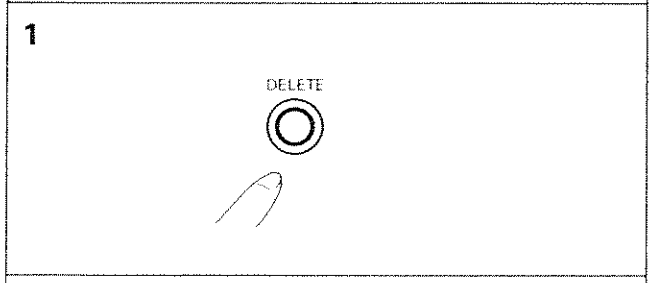

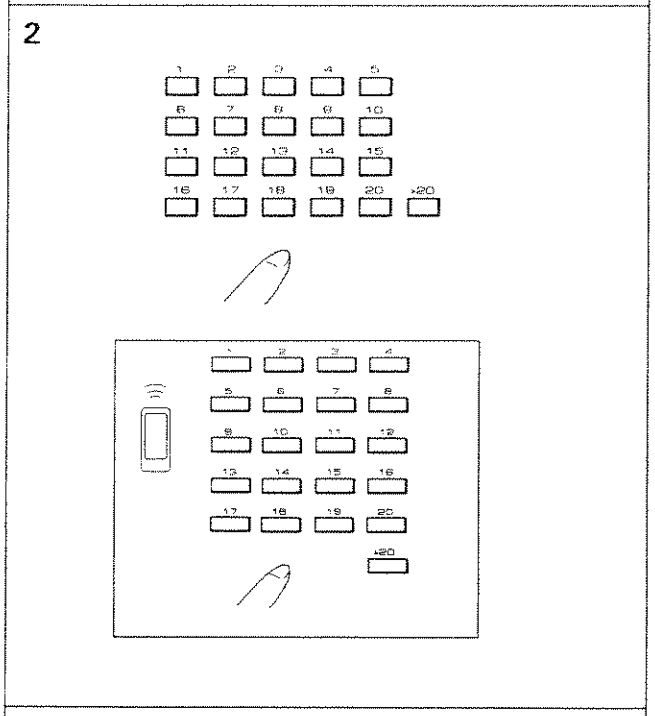

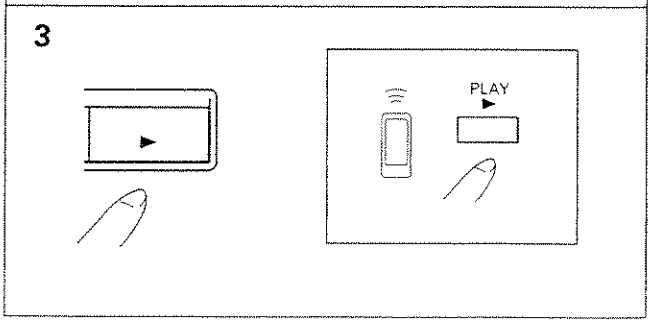

Delete program playback - To delete undesired tracks (PD-S702 only)

1 **Press DELETE in stop mode.**
- The DEL indicator lights on the display.

2 **Enter the track No. to be deleted with the track number/digit buttons.**

3 **Press ►.**
All tracks other than deleted tracks are played in the order of the track numbers. When tracks have been played, the player enters stop mode.

To stop delete program playback, press ■.

- To go to the previous or next track other than the deleted track, press |◄◄ ◄◄ (or |◄◄) or ►► ►►| (or ►►|).
- If the disc is in the player, the delete program contents will not be erased even if the power is turned off. However, if the power cord is unplugged or an audio timer is used to turn off the power, the delete program contents will be erased.

NOTE:
After programming for program playback or during program playback mode, Delete programming cannot be carried out.

To clear all of the delete program contents

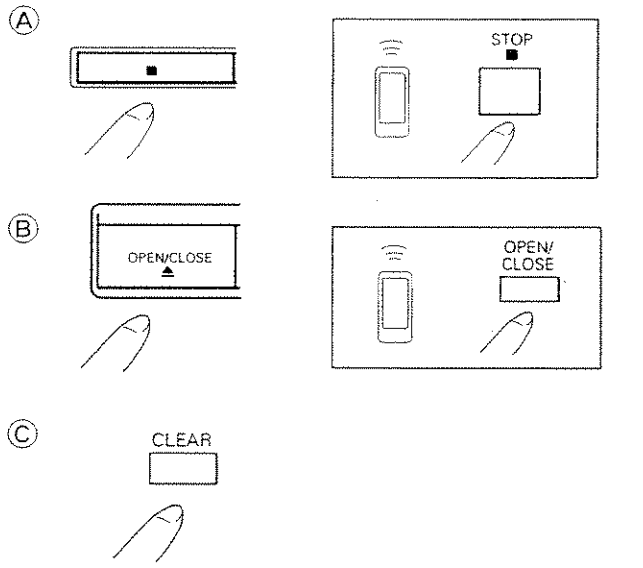

Ⓐ During stop mode, press ■.

Ⓑ When the disc tray is ejected, the delete program contents will be cleared.

Ⓒ During playback or stop mode, the delete program contents will be cleared by pressing CLEAR.

CONVENIENT OPERATION FOR RECORDING

PD-54/PD-S802

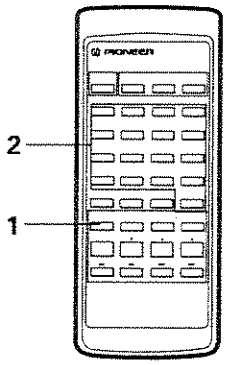

PD-S702

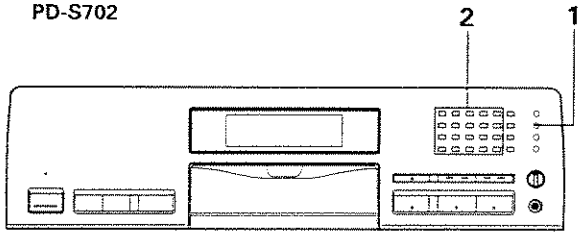

1 PD-54/PD-S802 PD-S702

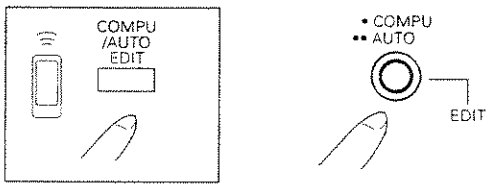

2 PD-54/PD-S802

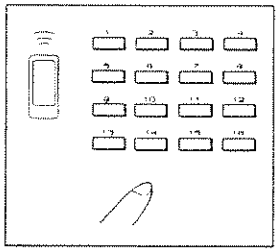

PD-S702

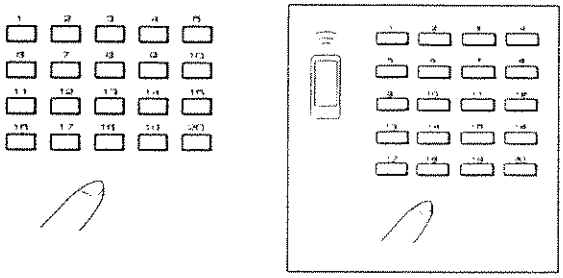

With this function, tracks are automatically programmed for both sides of the tape.

COMPU PROGRAM EDIT
The player automatically rearranges the order in which tracks are played back so that their total playing time becomes the specified playing time as near as possible.

AUTO PROGRAM EDIT
Tracks are selected within the designated time, starting from the first track and progressing in order.

1 Select the Compu Program Edit mode or Auto Program Edit mode with COMPU/AUTO EDIT.

To enter the Compu Program Edit mode: Press the button once. The COMPU indicator lights on the display.
To enter the Auto Program Edit mode: Press the button twice. The AUTO indicator lights on the display.

> To program all tracks on the disc: press the button once and do not perform step 2 below.
> In about three seconds, the player will automatically select the tape length (46, 60 or 90 minutes) which will allow recording of all tracks on the disc, then program the tracks.

2 Designate the length of tape to be used.

When the digit buttons are used:
Press the digit buttons to set the length (time) of the tape.
Press the 10's digit button and 1's digit button sequentially. (To enter 9 minutes or less, press [10] and then the corresponding digit button.)
When the track search buttons are used:
Press ⏮ ◀◀ (or ⏮) or ▶▶ ⏭ (or ⏭) to select the length (time) of the tape.

- Each time the button is pressed, the time setting will change in the following order:

46 ⟷ 54 ⟷ 60 ⟷ 74 ⟷ 90 Unit: Minute

After the time is selected, press COMPU/AUTO EDIT. When COMPU/AUTO EDIT is not pressed within 3 seconds after the time is selected, the displayed time is automatically memorized.

Example: The tape playing time 46 minutes is selected.

COMPU PROGRAM EDIT

Side A



Side B



AUTO PROGRAM EDIT

Side A



Side B



To confirm the programmed results:
After completion of programming, press COMPU/AUTO EDIT; each time the button is pressed, the program results will be alternately displayed for tape side A and B.

NOTES:

- *Up to 24 steps can be programmed.*
- *With discs containing 24 tracks or more, programming may not be correctly performed.*
- *If the selected time is too short for any track to be programmed, programming cannot be performed.*
- *If you wish to enter the time with the digit buttons after the time is already entered with ⏮ ◀◀ (or ⏮) or ▶▶ ▶▶⏭ (or ▶▶⏭) in step 2, press* >16 *(PD-54/PD-S802) or* >20 *(PD-S702). The digit buttons can now be operated.*
- *If the disc is in the player, the contents of the Compu program edit are not cleared even when the power is turned off. However, if the power is turned off with an audio timer or by unplugging the power cord, the program contents will be erased.*

To clear all of the Compu/Auto program contents

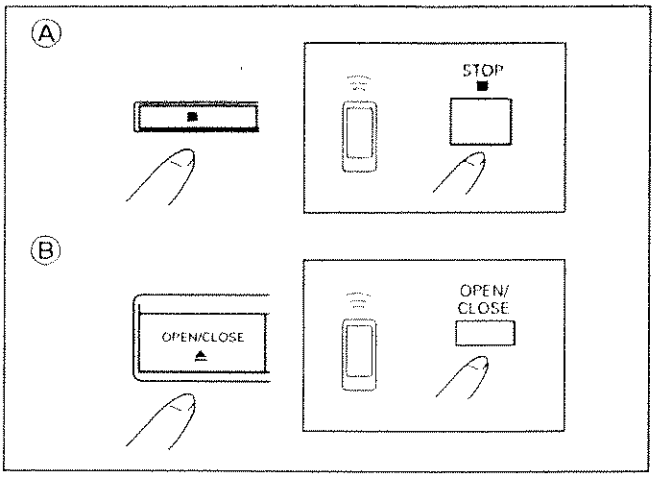

Ⓐ During stop mode, press ■.
Ⓑ When the disc tray is ejected, the program contents will be cleared.

CONVENIENT OPERATION FOR RECORDING

PD-54/PD-S802

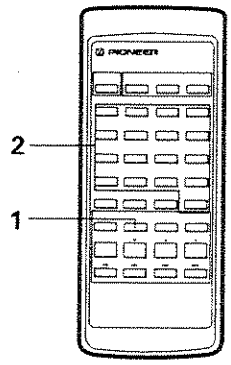

PD-S702

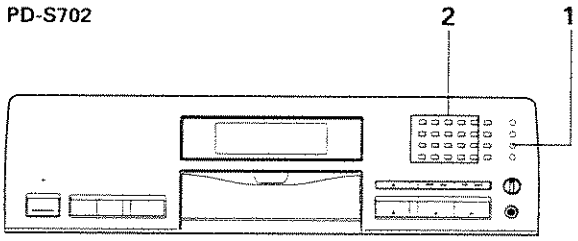

1 PD-54/PD-S802

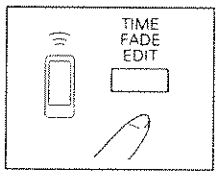

PD-S702

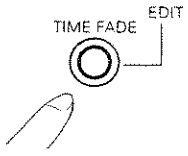

2 PD-54/PD-S802

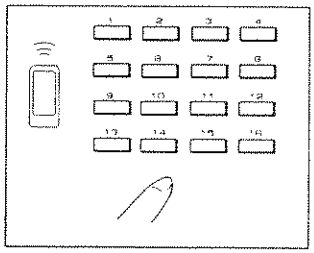

PD-S702

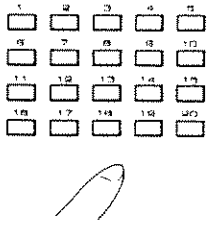

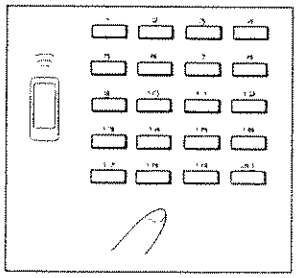

TIME FADE EDIT

Tracks are selected within the specified time and playback pauses with a fade-out.

1 Press TIME FADE EDIT in stop mode.

2 Designate the recording time.

Press the digit buttons to set the recording time.

Press the 10's digit button and 1's digit button sequentially. (To enter 9 minutes or less, press [10] and then the corresponding digit button.)

The displayed time is memorized and the player programs the tracks within the selected recording time.

NOTES:

- *If random playback, track search or direct play is carried out during Time fade editing playback, Time fade editing will be cleared.*
- *During Time fade operation, programming for program playback/ Delete program playback cannot be (PD-S702 only) carried out.*
- *If you want to record the programmed tracks, perform a program beforehand. (See "Program playback")*
- *If the disc is in the player, the contents of the time edit are not cleared even when the power is turned off.*
  However, if the power is turned off with an audio timer or by unplugging the power cord, the time fade contents will be erased.

To clear the time fade contents

Ⓐ

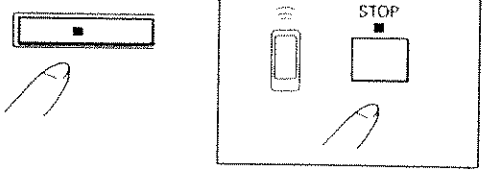

Ⓑ

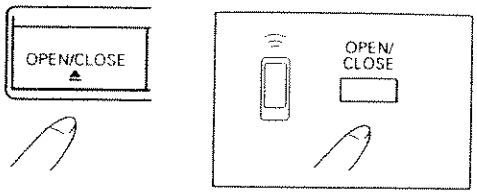

Ⓐ During stop mode, press ■.

Ⓑ When the disc tray is ejected, the time fade contents will be cleared.

TROUBLESHOOTING

Incorrect operations are often mistaken for trouble and malfunctions. If you think that there is something wrong with this component, check the points below. Sometimes the trouble may lie in another component. Investigate the other components and electrical appliances being used.
If the trouble cannot be rectified even after exercising the checks listed below, ask your nearest PIONEER authorized service center or your dealer to carry out repair work.

Symptom	Cause	Remedy
Disc tray is not expelled when OPEN/CLOSE is pressed.	• Power plug is disconnected from outlet. • The POWER switch is OFF (STANDBY).	• Connect plug to amplifier or wall outlet. • Press the POWER switch ON.
When playback is started, it stops immediately. Pauses or stops during playback.	• Disc is loaded upside down. • Smudges, etc., on the disc.	• Load the disc with the label side DOWN. • Clean the smudges from the disc and then play it again.
No sound	• Output cables are connected incorrectly or loosely. • Incorrect operation of stereo amplifier. • Pin plugs and/or amplifier terminals are dirty. • Player is in pause mode.	• Connect properly. • Check the settings of amplifier switches and sound volume controls. • Clean away dirt. • Press the ► button.
Sound is distorted, noise is output.	• Incorrect connections. • Pin plugs and/or amplifier terminals are dirty. • Interference is being picked up from a TV set.	• Connect to amplifier's AUX or CD terminals. Do not connect to PHONO terminals. • Clean away dirt. • Switch OFF TV set, or move player away from TV set.
With certain discs, loud noise is produced, or play stops.	• Disc has bad scratch or warp. • Disc is extremely dirty.	• Replace the disc. • Clean disc.
The picture of the TV screen is fluctuating or FM broadcast has noise interference.	• Interference is being picked up from the CD player.	• Turn off POWER of the player, or move the player away from TV or tuner.
Remote control will not function.	• Dead batteries. • Too far from player or wrong angle. • Obstruction between player and remote control unit.	• Replace batteries. • The distance between remote control unit and player should be no more than about 7 meters. The operational angle against the front panel is within 30° from right or left end of player. • Relocate remote control unit or remove obstruction.
System remote control will not function. (PD-54/PD-S802 only)	• Control cord is not connected.	• Connect control cord properly (see page 6).

Abnormal functioning of this unit may be caused by lightning, static electricity, or other external interference. To restore normal operation, turn the power off and then on again, or unplug the AC power cord and then plug it in again.

SPECIFICATIONS

1. General

Type ..... Compact disc digital audio system
Power requirements
U.S. model ..... AC 120 V, 60 Hz
U.K. and Australian models ..... AC 230 - 240 V, 50/60 Hz
Singapore model ..... AC 220 - 230 V/230 - 240 V, 50/60 Hz
Multi-voltage model ..... AC 110/120 - 127/220/240 V, 50/60 Hz
Power consumption
PD-54/PD-S802 ..... 18 W
PD-S702 ..... 15 W
Operating temperature ..... +5°C - +35°C
+41°F - +95°F
Weight
PD-54 ..... 5.0 kg (11 lb)
PD-S802 ..... 5.0 kg (11 lb)
PD-S702 ..... 4.2 kg (9 lb 4 oz)
External dimensions
PD-54 ..... 440(W) x 270(D) x 131(H) mm
17-11/32(W) x 10-5/8(D) x 5-5/32(H) in.
PD-S802 ..... 420(W) x 270(D) x 131(H) mm
16-9/16(W) x 10-5/8(D) x 5-5/32(H) in.
PD-S702 ..... 420(W) x 270(D) x 125(H) mm
16-9/16(W) x 10-5/8(D) x 4-15/16(H) in.

2. Audio section

PD-54/PD-S802

Frequency response ..... 2 Hz - 20 kHz
S/N ratio ..... 110 dB or more (EIAJ)
Dynamic range ..... 98 dB or more (EIAJ)
Harmonic distortion ..... 0.0021% or less (EIAJ)
Output voltage ..... 2.0 V
Wow and flutter ..... Limit of measurement
(±0.001% W.PEAK) or less (EIAJ)
Channels ..... 2-channel (stereo)

PD-S702

Frequency response ..... 2 Hz - 20 kHz
S/N ratio ..... 110 dB or more (EIAJ)
Dynamic range ..... 96 dB or more (EIAJ)
Harmonic distortion ..... 0.0026% or less (EIAJ)
Output voltage ..... 2.0 V
Wow and flutter ..... Limit of measurement
(±0.001% W.PEAK) or less (EIAJ)
Channels ..... 2-channel (stereo)

3. Output terminal

PD-54/PD-S802

Audio line output jacks (FIXED)
Control input/output jacks (PD-54 and Singapore and multi-voltage models of PD-S802 only)
Optical digital output jack
Coaxial digital output jack (PD-54 and the U.K. model of PD-S802 only)
CD-DECK SYNCHRO jack

PD-S702

Audio line output jacks (VARIABLE)
Audio line output jacks (FIXED)
Optical digital output jack
CD-DECK SYNCHRO jack
Headphone jack (with motor drive volume control)

4. Functions

Basic operation buttons
- PLAY, PAUSE, STOP

Search function
- Direct play
- Track search
- Manual search
- Index search (PD-54/PD-S802 only)

Hi-Lite scan (PD-S702 only)

Programming
- Maximum 24 steps
- Pause
- Program check/correction
- Program clear (single track or all tracks)
- Delete play (PD-S702 only)

Repeat functions
- 1 track repeat
- All tracks repeat
- Program play repeat
- Random play repeat
- Delete play repeat (PD-S702 only)
- Delete random play repeat (PD-S702 only)
- Hi-Lite scan repeat (PD-S702 only)

Random play (repeat also available)
- Delete random play (repeat also available) (PD-S702 only)

Switching display
Time consumed, remaining time (track/disc), and total time

Display off function

Timer start

Peak search

Auto space (PD-S702 only)

Reserve function (PD-S702 only)

Compu/Auto program editing
Selects the tracks within the specified time.

Time fade editing

5. Accessories

- Remote control unit 1
- Size AAA/R03 dry cell batteries 2
- Control cable (PD-54 and Singapore and multi-voltage models of PD-S802 only) 1
- Output cable 1
- Operating instructions 1

NOTE:

Specifications and design subject to possible modification without notice, due to improvements.

Published by Pioneer Electronic Corporation.
Copyright © 1993 Pioneer Electronic Corporation.
All rights reserved.

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS [USA] INC. 2265 East 220th Street, Long Beach, California 90810, U.S.A.
P.O. BOX 1720, Long Beach, California 90801, U.S.A.
PIONEER ELECTRONICS OF CANADA, INC. 300 Allstate Parkway Markham, Ontario L3R 0P2, Canada
PIONEER ELECTRONIC [EUROPE] N.V. Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium, TEL: 03/750.05.11
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia, TEL: [03] 580-9911

<93C02WF0D01>

Printed in Japan <PRB1196-A>